


SC-501
使用说明书


产品介绍

- | | | |
|---------|----------|---------|
| 1. 保护罩 | 2. 鬓刀 | 3. 剃须刀头 |
| 4. 鬓刀推钮 | 5. 开关按钮 | 6. 刀网 |
| 7. 充电插头 | 8. 清洁毛刷 | 9. 说明书 |
| 10. 合格证 | 11. 旅行布袋 | |

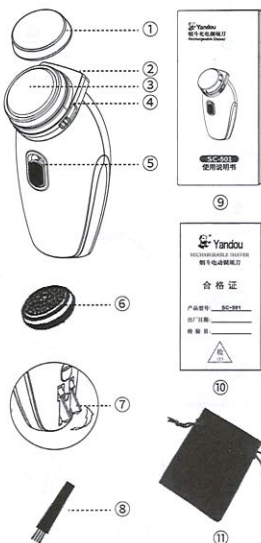


① 充电

- 充电时开关必须处于关闭状态。
- 为不影响产品的使用寿命，请在电池完全充满电后从插座上取下，电池用完后再次充电，并不要让剃须刀充满电后连续接通电源。

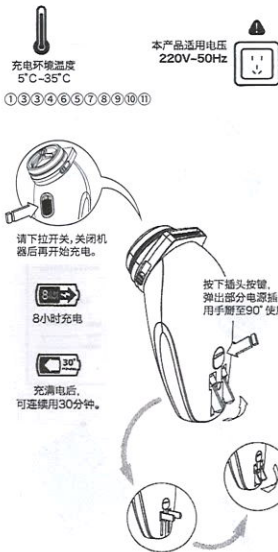


② 剃须

- 注意您的皮肤需要一段时间去适应本剃须刀的独特剃须系统。
- 关掉剃须刀；然后把剃须刀全量上，以防止损坏。
- 当刀头有损坏请不要进行剃须，以免损伤您的皮肤。

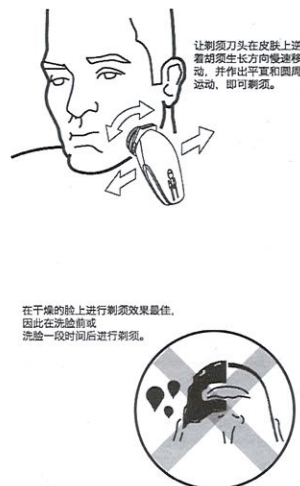

③ 修剪

- 用于修整两鬓角的胡子和长胡须。

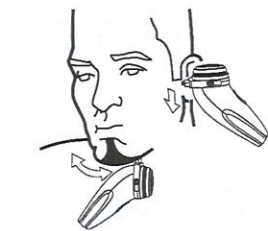


将鬓刀滑给锁向外推，使修剪刀弹出，开始剃须刀。

每两个月在鬓刀锁口处加一滴缝纫机油，以保持其润滑。



④ 清洁

- 定期清洁剃须刀可保证更好的剃须效果。
- 若需要，可用除菌液(例如酒精)辅助清洁剃须刀刀网。
- 如果这样做，请在清洁后用水清洗，并用干净的布擦干剃须刀刀网。
- 将剃须刀重新安装到剃须刀上。
- 警告：本产品不具备防水功能，请保持器具干燥。清洁产品之前，务必将充电插头从产品上拔下并将产品关机。

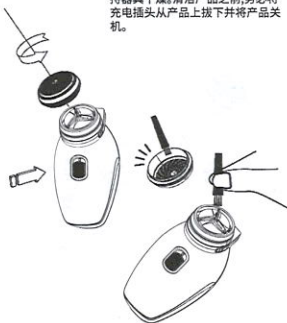

剃须部件的清洁:

- 每周清洁一次剃须部件。
- 逆时针旋转刀网组件，使其松开并取下刀网。
- 刷净毛发。


剃须刀刀片的清洁:

- 每两个月清洁一次剃须刀片。
- 逆时针旋转刀网组件，使其松开并取下刀片。
- 用清洁剂清洗刀片。
- 用清洁剂清洗刀网。



⑤ 拆卸电池

- 本机最里面设置的电池含有污染环境的物质，倘若有时您想要扔掉此机器时，请拆卸电池，并将它交给一些正式的收集点。
- 您本人也可以拆卸剃须刀里面的电池。
- 在拆卸电池之前，请确保电池无电，若有余电，打开机器直到发出响声为止。
- 在拆卸电池之后绝对不要将机器再与电源插座连接。
- 取出电池时，机器必须断电。

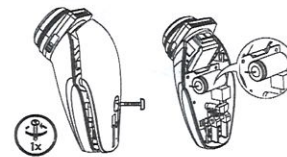

⑥ 更换刀网

- 每年更换一次刀网以保证理想的剃须效果。
- 用旧或损坏时，请务必用原厂配件更换，这样会使您的剃须效果更佳。



换配件及清洗:

- 配置刀片罩按逆时针方向旋出即可更换，刀头垂直拔出即可更换。
- 此款不是防水剃须刀，不能冲洗，需将刀片罩逆时针旋出后用毛刷清理。

电动剃须刀保修条例

尊敬的用户:

感谢您选择我们的电动剃须刀作为您的日常护理伙伴。为了确保您在使用过程中享受到无忧的体验,我们特此制定以下保修条例,以明确我们的保修责任和服务范围。

一、保修期限

自您购买本电动剃须刀之日起,我们提供为期一年的有限保修服务。保修期内,若产品因非人为因素导致材料或工艺缺陷而出现故障,我们将提供免费维修或更换服务。

二、保修范围

1. 电机及主要部件:剃须刀的电机及主要部件,在正常使用情况下因制造或材料缺陷导致的故障。

2. 电池问题:在正常使用条件下,电池性能明显下降或无法充电。

3. 外壳及内部组件损坏:因制造缺陷导致的外壳破裂、内部零件松动或损坏。人为损坏(如摔落、挤压等)则不在此列。

三、不属于保修范围的情况

1. 人为损坏:包括但不限于跌落、挤压、浸水、私自拆解、不当使用非原装配件等造成的损坏。

2. 自然磨损:如刀网长时间使用而产生的正常磨损。

3. 不可抗力因素:如火灾、水灾、地震等自然灾害导致的损坏。

4. 非官方渠道购买:通过非官方授权的销售渠道购买的产品,其保修服务可能不受本条例保护。

5. 超出保修期限:产品自购买之日起超过保修期的。

四、保修流程

1. 联系客服:请通过我们的官方网站、客服热线或指定渠道联系我们的客户服务团队,提供购买凭证(如发票、收据)及故障描述。

2. 故障鉴定:根据客服指导,您可能需要将产品寄送至我们指定的服务中心进行故障鉴定。

3. 维修或更换:经鉴定符合保修条件的,我们将为您提供免费维修或更换服务。若需更换,我们将以同型号产品或性能不低于原产品的替代品进行替换。

4. 寄回产品:维修或更换完成后,我们将尽快将产品寄回给您。


五、特别提示

请妥善保管购买凭证,它是享受保修服务的重要依据。我们保留对本保修条例的最终解释权。

再次感谢您对我们的信任与支持,我们将竭诚为您提供优质的产品和服务!如有任何疑问,请随时联系我们。


Product introduction

1. The shield
2. Sideburns
3. Razor head
4. Sideburns push the button
5. Switch button
6. Knife Net
7. Charging Plug
8. Clean the brush
9. Instructions
10. Certificate
11. Travel Bag

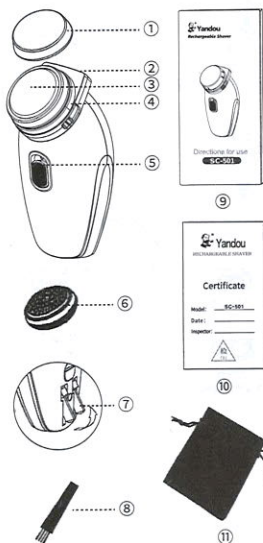

① Charge

- In charging, the switch must be in an off state.
- In order not to affect the product's service life, please charge the battery fully first before unplugging it from the socket, and don't recharge it until it's used up. Don't keep the shaver connected to the power supply again when it's fully charged.

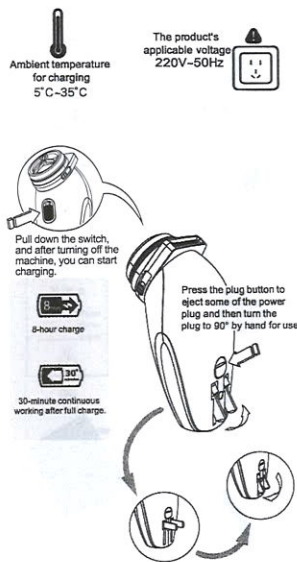


② Shave

- Note that your skin needs some time to be adapted to this shaver's unique shaving system.
- Switch off the shaver, and then load the dust cover to avoid damages.
- When the cutter head is damaged, please don't use the shaver to avoid injuries to your skin.




③ Trim

- To trim sideburns and long whiskers.

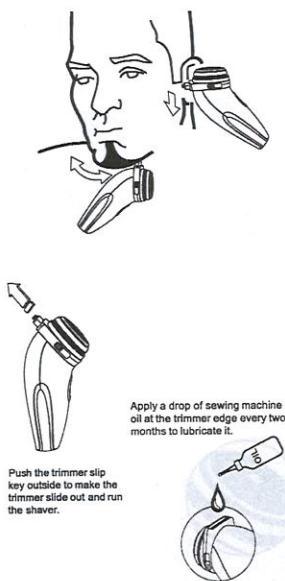


④ Clean

- Cleaning the shaver on a regular basis can ensure a better shaving effect.
- If necessary, use a degreasing liquid (such as alcohol) to help cleaning the shaver's foil.
- If so, please lubricate the shaver foil with a drop of sewing machine oil after cleaning to avoid abrasion to the shaver foil.
- Reload the shaving assembly onto the shaver.
- Warning: This product is not waterproof. Please keep the device dry.

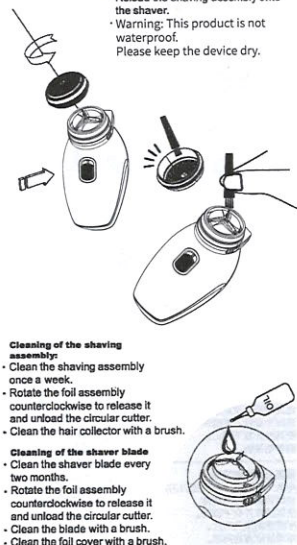


⑤ Unload the Battery

- The battery included in the shaver contains environment-hostile substances, and if you want to discard the shaver, please unload its battery and send it to an official collection point.
- You can also unload the battery inside the shaver.
- Before unloading the battery, make sure that there is no energy in the battery, and if there is still energy, run the shaver until the engine stops.
- It is by no means allowed to connect the shaver to the socket again after the battery is unloaded.
- Power off when taking out the battery.

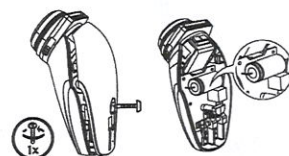

⑥ Replace the Foil

- Replace the foil once a year to ensure the optimal shaving effect.
- When it is worn out or damaged, please replace it with an original part, which can contribute to a better shaving effect.

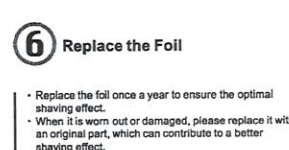

故障原因填写表格

序号	故障现象描述	是否尝试解决(是/否)	解决方法尝试描述(如有)
1	剃须刀无法启动		
2	剃须效果不佳(如拉扯、切割不干净)		
3	电池续航时间明显缩短或无法充电		
4	刀头或刀网异常磨损或损坏		
5	外壳破裂或内部零件松动		
6	其他故障,请具体描述:		

全国售后服务热线: 0577-88312228
地址: 浙江省温州市鹿城区龙兴东路2.2号
传真: 0577-88339161
邮编: 325000
网址: www.wzyandou.com